


Now that you have selected this package here are some tips:

With the Standard Universal Package you need to make sure your largest solid in your sample is no larger than 5mm in diameter. If it is, you either need to reduce the size beforehand or upgrade to the Deluxe MaX-Homogenizing Package (your largest sample can then be 10mm).





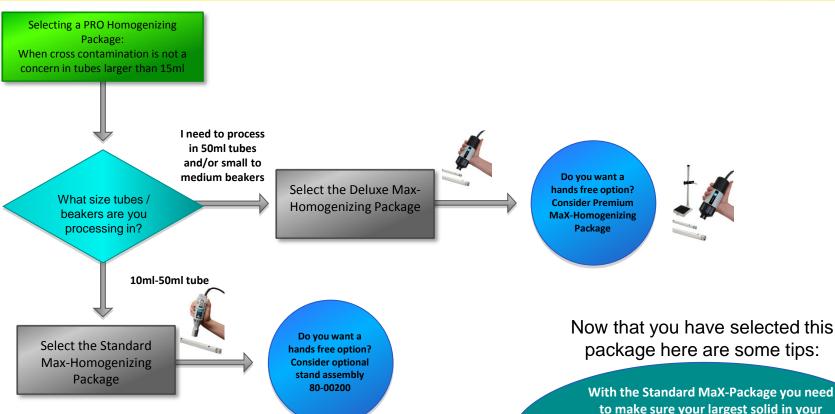

Now that you have selected this package here are some tips:

to make sure your largest solid in your sample is no larger than 5mm in diameter. If it is, you either need to reduce the size beforehand or upgrade to the Deluxe MaX-Homogenizing Package (your largest sample can then be 10mm).