


NAB Nanosep® Device Quick-Start Guide

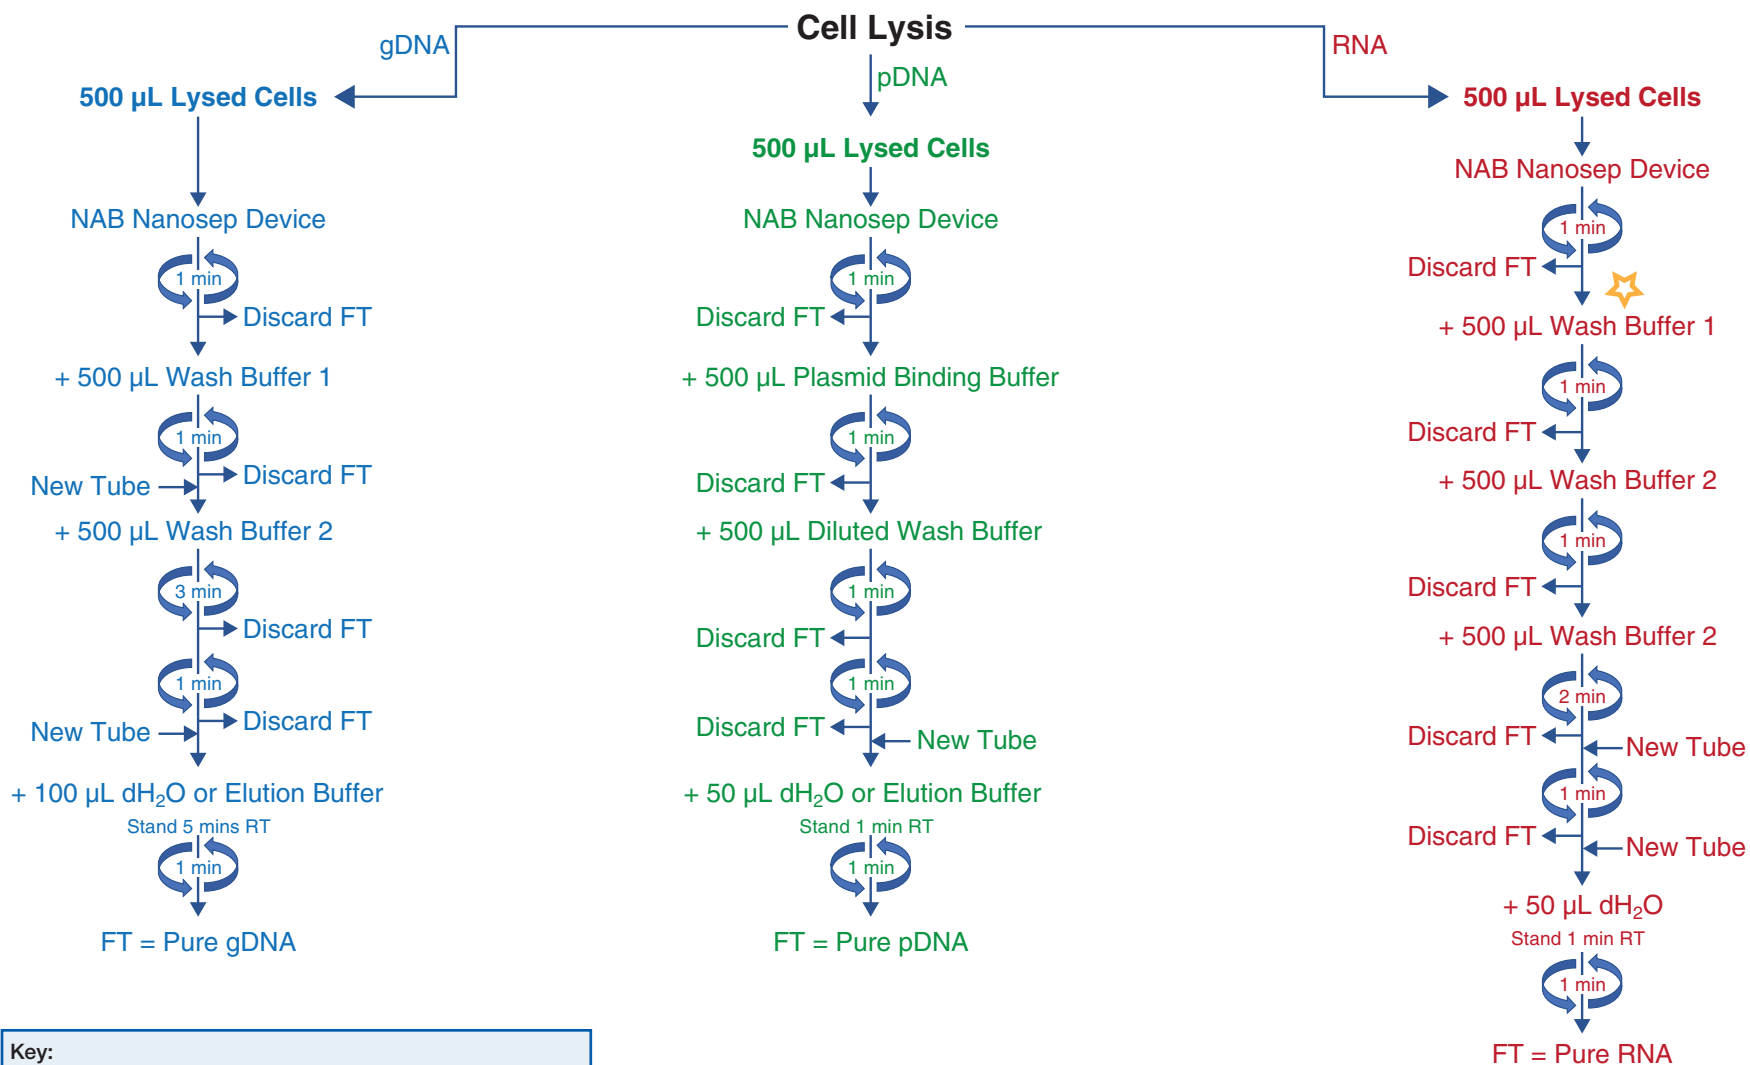

Key:

FT – Flow Through
 Centrifuge 10-14,000 x g
 gDNA – Genomic DNA
 pDNA – Plasmid DNA
 dH₂O – RNase-free water
 RT – Room Temperature

For optional DNA/RNA digestion processes, as well as full instructions and translations, search 'NAB Nanosep' on the Pall website.