

# **MODEL 8.0-RP**

UVC Meter • 0-1999 μW/cm<sup>2</sup>

Handheld Digital UVC Radiometer with Remote Probe



## **APPLICATIONS**

- Monitoring UVC Germicidal Lamp Intensity & Aging
- Testing Eyewear UVC Blocking Capabilities
- Measuring Germicidal Lamp Fixture Leakage





**PUBLIC HEALTH** 

**FEATURES AND BENEFITS** 

- Remote Probe with 3 ft (0.91 m) Cable
- Compact, Handheld, and Durable
- Simple Single-Button Operation
- NIST Traceable Accuracy
- LCD Display
- Made In USA







### **SENSOR**

Silicon Diode (SiC) Photodiode in hermetically sealed UV glass window cap. Interference filter blocks UV above 280nm as shown on Spectral Sensitivity Graph.

#### **METER OPERATION**

To operate your Solarmeter, aim the sensor window located on the top panel of the meter directly at a UV source. Press and hold the push-button switch on the face of the meter. For best results take note of the distance the reading was taken from the UV source in order to ensure repeatable results.

Battery operation voltage is viable from 9V down to 6.5V. Below 6.5V, the numbers on the LCD display will begin to dim, indicating the need for battery replacement. Under typical service load, a standard 9V battery will last approximately 2 years.

## PROPER USAGE OF SOLARMFTFR™ **ULTRAVIOLET RADIOMETER**

- When checking UVC sources, wear face, hand, and eye protection and cover any skin that may be exposed.
- Allow lights to warm-up prior to taking readings (at least 5 min).
- For individual light intensity, hold meter close to LED or lamp.
- For effective light intensity, hold meter at working distance from the light source.
- When checking aging of lights, keep measuring distance and locations constant.
- Lights should be replaced when output drops to about 70% of their original (new) readings.









# **MODEL 8.0-RP**

UVC Meter · 0-1999 μW/cm<sup>2</sup>

### **GENERAL**

- Do not subject the meter to extremes in temperature, humidity, shock or dust.
- Use a dry, soft cloth to clean the instrument. Keep sensor free of oil, dirt, etc.

Note: Sensor is completely solar blind to UVB, UVA, visible and IR. Meter will read 000 pointing at non UVC sources including sun, flood lamps etc.

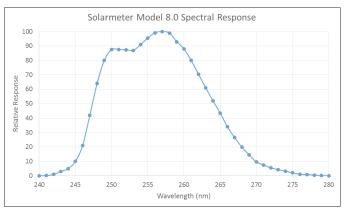


Fig. 1. Model 8.0-RP Spectral Response

SPECIFICATIONS	
MODEL	8.0-RP
IRRADIATION RANGE	0-1999 μW/cm² UVC
RESPONSE	246-262 nm
RESOLUTION	1 μW/cm²
CONVERSION RATE	3.0 Readings / Sec
DISPLAY	3.5 Digit LCD
DIGIT SIZE	0.4" / 10.2 mm
OPERATIONAL TEMPERATURE	32°F to 100°F / 0°C to 37.8°C
OPERATIONAL HUMIDITY	5% to 90% RH
ACCURACY	±10% Ref. NIST
METER DIMENSIONS	4.2L x 2.4W x 0.9D in / 106.7L x 61W x 22.9D mm
REMOTE PROBE DIMENSIONS	0.8H x 1.6D in / 20.3H x 40.6D mm
WEIGHT	4.5 oz / 128g Including Battery
POWER SOURCE	9-Volt DC Battery
LENS	UV Glass
DIFFUSER	None
DETECTOR	SIC Photodiode w/IF
AGENCY APPROVAL	CE Mark

REV B | MODEL 8.0-RP | Sept 2020 Specifications subject to change without notice.

**SOLAR**METER<sup>™</sup> by Solar Light Company Inc. is the industry standard for UV and visible light radiometers that measure both indoor and outdoor light sources. Our NIST Traceable meters are used to monitor lamp irradiance and aging for UV sterilization, reptile husbandry, indoor tanning, red/blue light phototherapy, UV curing and UV Index.



