SOURCE

by ExtractCraft



Turbo Mode User Manual



TURBO MODE USER MANUAL

Version 12 February 13, 2019 Part # 1007-1051

ExtractCraft

105 South Sunset Street, Unit M,
Longmont, CO, 80501
United States
Phone: 720-534-1242

customer support: info@extractcraft.com



| • | Safety | 1 |
|---|----------------------------------|----|
| | Safety & Plant extract warning | |
| | The Source: Main Function | 2 |
| | Appliance for Plant Extractions | |
| | Alcohol Solvent | |
| | Source Operation & | |
| | Making a Plant Extract | 3 |
| | Care & Cleaning | 9 |
| | Mobile Application | |
| | Installing the Mobile App | |
| | Setting up Bluetooth | |
| | Launch the Source App | |
| | Using the Menu | |
| | Understanding the Control Screen | |
| | Altitude Tuning | 13 |
| | Botanical Recipies | 14 |
| | Troubleshooting | 15 |
| | Technical Specifications | |
| | Warranty | |
| | Glossary | |
| | | |



WARNING: For your safety always allow all metal parts of the Source to completely cool before handling. The reservoir cup, collector, and metal top on the base can get very hot.



WARNING: For your safety and convenience always follow these safety guidelines:

- Place the Source well away from heat sources, direct sunlight, or places where heat may become concentrated.
- **Inspect the outer collector** for cracks or any defect and ensure that the lid and lower seal fit securely.
- **Do not use the Source** if any parts are damaged, flaking or show excessive wear in any way.
- Alcohol is extremely flammable!
- Make sure the fan in the base unit is always running. The unit must not be used if the fan stops running.
- Always use caution when handling alcohol and keep it well away from any kind of flame or ignition source. This goes for while operating the device, during preparation, and anytime it is exposed outside of a closed container. Keep alcohol away from children and pets.
- Always allow the outer collector to cool before opening the lid.
- **Never allow the collector to over flow,** this could flood the pumps.
- Keep the base of the unit away from water at all times. Do not immerse or expose base unit into water or liquid of any kind.

SAFETY



SOLVENT: Only food grade ethanol

warning: Only food-grade, non-denatured ethanol may be used in the Source. Do not use ethanol with any kind of adulterants like heptane or similar. Do not use methanol (wood alcohol) or any other solvents in the Source as they may be poisonous, lead to sickness or possibly death, or create fire and explosion hazards. For safe operation and your own health, it's very important no other solvents other than food grade ethanol are present in the machine at any time.



PLANT EXTRACT WARNING


WARNING: Some plant extracts are potentially dangerous due to the toxicity of concentrated chemical components and may be harmful or even deadly if ingested or absorbed through skin or membranes.

Some botanical oils that would do no harm in a diluted form may do serious harm in higher concentrations. The internal use of botanical oils can also pose hazards to pregnant women.

The *flash point* (temperature at which a compound gives off sufficient vapor to ignite) of each plant extract is different. Many common oils, such as tea tree, lavender, and citrus oils are classified as flammable liquids.

Botanical oils valued for aroma-therapeutic qualities may cause skin irritation, allergic reactions and other health problems. You must determine the hazards and handling requirements of the particular oils you extract.

ExtractCraft makes no claims about botanical oils and their uses. This is simply a device for extracting them.

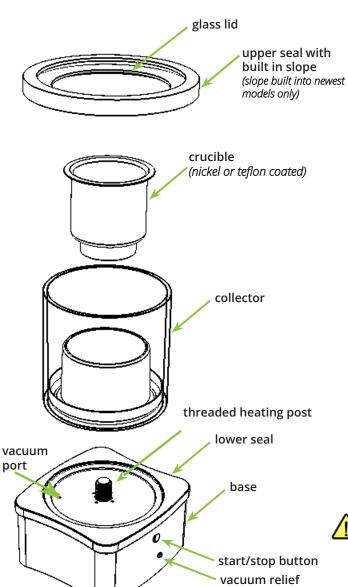

The Source: Main Parts

THE SOURCE MAIN FUNCTION

APPLIANCE FOR PLANT EXTRACTIONS

The Source is an easy to use home appliance for extracting plant essences.

Plant essences are key to the smell, taste, and other properties of plants and are used in flavorings, perfumes, herbal extracts and medicinals.

The first step in making plant extracts is to make a tincture. A tincture is a solution made from the combination of plant matter and food-grade alcohol. Lavender, mint, hops, rosemary, cinnamon, radishes, calendula flowers and many other plants have been used successfully. The oils of some plants, such as mint and lavender, dissolve in alcohol very quickly (5 to 20 minutes). Others, such as vanilla or rose petals, may take hours or longer for the best result. Some extracts benefit from using alcohol that has been thoroughly chilled in the freezer during the tincture process, others are best prepared at room temperature. See www.extractcraft.com for more information, recipes and links and share your own results.

The second step is to simply use the Source to separate the plant essence from the tincture. The Source removes the alcohol from the tincture, leaving the pure plant essence. The alcohol is captured for reuse.



screw

For best results and operation use 190-proof (95%) or higher food grade ethanol.

MAKING A PLANT EXTRACT

1. INSTALL THE MOBILE APP

The Source app is a great way to monitor the time, temperature of heat being applied, and vacuum. Information for installation can be found under 'Mobile App' on page 10.

SOURCE PROCESS CONTROLS START PROCESS

Install the app.

2. GATHER THE NEEDED SUPPLIES

You will need:

- a glass container
- up to 2 oz. plant matter
- 190-proof grain alcohol
- strainer and filters
- funnel for rebottling the alcohol
- suitable container for storing extract



Supplies

3. MAKE THE TINCTURE

Place clean plant matter in a clean glass container. Divide large pieces into similar smaller lengths for good fit. Cover with 190-proof grain alcohol to about 1/4" above the plant volume. Allow the plant matter to soak for 5-20 minutes or more. See www.extractcraft.com for recipes specific to your botanicals.



Make the tincture.

4. UNSCREW THE RESERVOIR CUP

Reach inside the collector and unscrew the reservoir cup from the base.



reservoir cup

5. STRAIN THE TINCTURE

Strain the tincture into the reservoir cup. Use a strainer, coffee filter, or Buchner funnel to remove particles.

Tip The repeated and thorough filtering results in a more clear end product.



reservoir cup

Strain the tincture into the reservoir cup.

6. READY THE SOURCE

Place the Source on a flat surface. Check that the lower seal is aligned with the base. Ensure the outer collector is seated properly in the recess of the lower seal on the base. A vacuum will be formed in the collector, so it must make good contact with the lower seal.



Ready the Source.

7. INSTALL THE RESERVOIR CUP

Carefully reach inside the collector and gently screw the reservoir cup onto the threaded post.



Screw the reservoir cup onto the threaded post of the base lightly.

8. PLACE THE LID

Place the lid flat with the wide rubber seal facing down and in contact with the glass collector rim.

Once the Source is in operation, a vacuum is created and the lid will be held firmly in place with negative pressure.



Place the lid on the collector.



Tip The wider rubber ring of the upper seal rests on the rim of the collector. The narrower rubber ring faces up.

9. PLUG IN THE SOURCE

Plug the Source into a 120 VAC outlet. The indicator button on the base glows steady green when the Source has power and is ready for use. If the button is not lit, then the Source is not getting power. When the Source is plugged in, the fan runs to ventilate the base.



Plug in the Source.

10. SEAL THE VACUUM

Turn the vacuum valve screw fully to the **right** to close the vacuum release valve.

(When turned to the left, the vacuum relief opens to allow air into the unit, releasing the vacuum seal so the lid may be removed.)



Turn the screw fully to the **RIGHT** to seal the chamber.

Never remove screw completely.

comm icon

11. START THE SOURCE

Normal Mode


Press the green button once *or* select the **START PROCESS** button on the app to start in normal mode.

- **1 slow flash** of the green button indicates the process starting.
- 2 fast **flashes** indicates stopping.

Turbo Mode

Press and hold the green button on the base for a full 3 seconds then release; 2 slow flashes indicate Turbo mode began.

(When using the app a green comm icon indicates the app is communicating with the Source via Bluetooth. A red comm icon indicates no Bluetooth communication: see trouble shooting p.15)

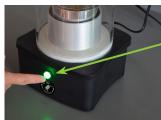

1 slow flash = starting Normal Mode
2 slow flash = starting Turbo Mode
2 fast flashes = stopping process

Press the green button on the base to start the Source or use the mobile app.





Mobile app START PROCESS button (When the process is running, the same button is for STOP PROCESS.)

12. CHECK THE VACUUM

When the Source is first started, the vacuum pump will run for a few minutes until it reaches full vacuum. When the vacuum pump start, press down firmly on the lid for 5-10 seconds. This helps to seal the chamber while the pump creates the vacuum. After that, the pump runs periodically to maintain the vacuum.

Use the mobile app to view the vacuum level. The vacuum level value will rise, then at maximum vacuum the pump will shut off. If a seal is not established within 10 seconds, check the following:

- Make sure the vacuum relief screw, located below the green button on the base, closed.
- Inspect the lower seal, collector, and upper seal and adjust them if needed to achieve better contact.
- Try pressing down on the lid if you haven't done so.
- Refer to Troubleshooting on page 15.



If the vacuum isn't establishe within 10 seconds, try pressing down on the lid to help it seal.



After starting, this value will begin to quickly rise to 100 at full vacuum.

13. USING THE ICE TRAY

The ice tray cools the lid to increase condensation of the alcohol vapor, which accelerates the extraction process and allows the vacuum pumps to run less often. Fill the tray with ice cubes (or with water and freeze overnight) place it on the lid and begin the extraction.




Always use the ice tray to help condense the alcohol, process faster, and requite less pump activity.

14. MONITOR EXTRACTION PROGRESS

Monitor the extraction by watching for alcohol condensing on the lid then rolling down the sides to accumulate in the collector. The liquid in the reservoir cup may or may not boil, but as long as condensation is happening on the glass progress is being made. Make sure condensed drops on the lid aren't falling back into the reservoir cup.

The vacuum pumps will run periodically to maintain the required vacuum level and the heat relay will make a clicking sound. In Turbo mode expect the pumps to run more often.

There is a 120-minute safety cut-off. The 120-minute limit can be reset by turning the unit off then back on without the need for a cool-down period. It's very important to closely monitor the extraction at the end to stop the process at the exact desired consistency.

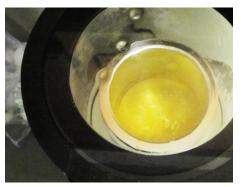

View heat input temperature, vacuum level, and run time for the extraction.

Monitor the extraction progress. You will see the alcohol condensing into the collector. About 4 hours is needed to extract the alcohol from a completely full reservoir.



Closely monitor process during the last 10-20 minutes. The Source's temperature will rise above the intended temperature when the alcohol in the solution is gone and active evaporation seises.



Never leave the Source unattended while operating.

15. WHEN EXTRACTION IS FINISHED

As the alcohol is evaporated from the tincture, it accumulates in the collector, and the plant extract remains in the reservoir cup.

The extraction can be ended at any point, as a tincture, oil, sap, or wax-like substance otherwise known as an absolute or concrete. The target consistency depends completely on preference and intended use.

16. STOP THE SOURCE

Press and release the green button once to manually stop the process. On the app, you can stop it by selecting the STOP PROCESS button.

On stopping, the green button on the base flashes **2 times** quickly.



STOP PROCESS

Press the button to stop the process or use the app STOP PROCESS button. 2 quick **flashes** indicates stopping.

17. RELEASE THE VACUUM

Turn the vacuum relief screw to the left 4-full turns (8-half turns) to relieve the pressure so you can remove the lid in the next step — do not remove the screw completely. It may take up to 60 seconds for pressure to release. Do not force the lid off.



Loosen screw to the left to relieve vacuum pressure.

18. ALLOW CHAMBER TO COOL

When finished, always allow the collector and reservoir cup to cool before handling. If the Source is operated without alcohol directly in the cup, the cup will become very hot, and require extra time to cool.



Allow components to cool before handling and removing reservoircup.

19. REMOVE THE EXTRACT

Remove the lid. Unscrew the reservoir from the post and transfer the extract into a storage container. Store the extract in a sealed container away from direct light and heat, and out of reach of pets and children.



20. COLLECT ALCOHOL FOR REUSE

If the collector is full enough, spillage may occur **from the bottom** when pouring out. Emptying the collector over a large bowl is recommended.

Most botanical oils will not leave any taste or smell in the reclaimed alcohol, however, some may leave a slight trace. If so, reuse that alcohol for similar extracts.

Always store alcohol out of reach of pets and children and well away from heat, combustion, and ignition sources.



Pour alcohol from collector into a container and store safely for reuse.



CARE FOR THE SOURCE:

It's very important to remember the Source is an advanced piece of technology and requires a certain degree of care to keep it in top operating condition.

Collection Globe: The globe will chip or crack if dropped or with a collision against another object. If any damage occurs the ability for a vacuum to form may become impossible. If this happens replacement globes are available for purchase.

Crucible: Screw the crucible onto the threaded heating post until it meets resistance and hand tight, don't over tighten. Never use damaged or flaking cups, replacements are available for purchase. Crucibles prior to March 2019 were nickel coated and changed to a teflon coating from February 2019. To identify which you may have, the nickel coating is metallic in appearance, while the teflon is black with white specks. Handwash only and never use anything that could scratch the coating or is abressive. Even small scratches can result in a failure of the coating.


Vacuum Relief Screw: NEVER REMOVE the screw all the way. To release the vacuum turn only 4 full turns to the left and wait for the pressure to equalize. Removing the screw can result in cross threading and will make creating a vacuum impossible. If this happens contact customer service before trying to reinsert the screw.

Green Button: Keep green button clean and clear of any debris or sticky elements. If the button becomes stuck, you can use a small amount of alcohol on a cotton swap then let dry over night. If free movement is not restored, send back to ExtractCraft for repairs.

CLEAN THE SOURCE

The removable parts, including the glass lid, upper seal, crucible, collector, and lower seal, should be hand washed with a mild soap and water.

The base where the electronics are housed must not be put into water at any time. To clean the base, gently wipe with a damp towel.

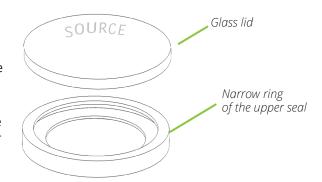

MOBILE APP

The mobile app works on Android or iOS mobile devices. It operates with the Source via Bluetooth and allows you to monitor time, temperature, vacuum, and confirm the altitude setting, as well as start and stop the unit.

INSTALLING THE MOBILE APP

Download the mobile app from your app store.



For the Google Play store, tap the search bar and enter **Extractcraft**.

Tap The Source by Extractcraft app, then tap INSTALL. Tap ACCEPT to allow the app to use Bluetooth.



For iOS, use search to find **The Source by Extractcraft app**, then
tap the Source app, and under the
app image, tap **GET**.



Once you have the app installed, you should see the Source app icon on your device.



CONFIRM BLUETOOTH ON

Use **Settings** to verify that you have Bluetooth ON.





LAUNCH THE SOURCE APP

Once the Source app is downloaded tap the icon to launch the app.



A green icon indicates when communication has been established with the Source.

A red icon indicates no Bluetooth connection. If this happens, confirm your mobile device Bluetooth is ON and make sure the Source has power and the green light is illuminated.

A blinking red/green icon means the Bluetooth connection is weak and the app is having trouble maintaining connectivity



Be sure the Source is plugged in and receiving power before attempting to connect and pair the mobile app


1

The opening screen may open without an available device visible. Tap the red phone icon at the top right of the screen to activate the 'SELECT APPLIANCE' screen




2

The Select Appliance screen will come up and display the devices available to choose from. Tap on the device you would like to monitor.

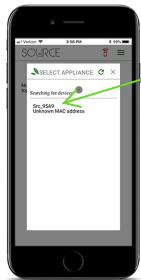

The 'Src_####'
number that
appears on the
display identifies
available units.
The four digits
correspond to the
last four digits of
the unit's s/n found
on the back of the
base.

If the device you would like to monitor is not appearing as an available option touch the green, circular refresh icon at the top right and all available devices will appear. Touch the device you wish to monitor.

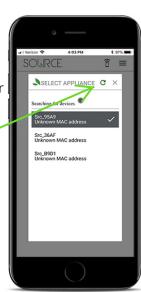


4

From the Process Controls screen you can start the Source in normal mode, monitor the progress of the extraction, and stop the process.



START/STOP PROCESS BUTTON

Select this button to start or stop the process. The green illuminated button on the base of the unit will flash to confirm the app's command.

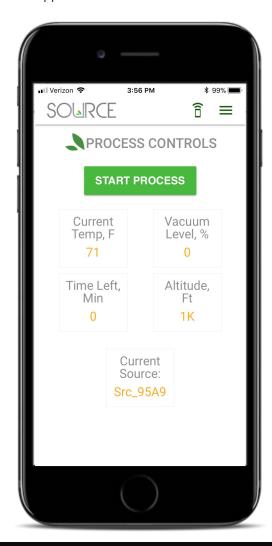

INTERPRETING THE DISPLAY VALUES

Process control readouts for the Source are available from the available on the Process Controls screen:

Current Temp, F: Displays the heat being pumped into the unit at any given time. When the heater is at rest it may display a low value, and when it is active it may display a higher value. Those heat input temps change to keep the alcohol in the cup at a constant 100°F-105°F during normal operations. **IMPORTANT** to understand, this is not an indication or direct reading of temperature of the liquid contents. It is an approximation of the temperature of the contents under normal operation while ethanol is still predominately present and being evaporated. If the extraction is left in the crucible too long the temperatures will rise above the parameters of the app.

Vacuum level %: Indicates the current vacuum as a percentage of total achievable vacuum. The internal controls will determine when it's necessary for the pumps to engage and reestablish 100%.

Time Left, Min: Shows the safety cutoff remaining time. This can be reset to the max 120-min by turning the machine off and on.

Altitude, Ft: Reflects the default altitude that has been programmed into the unit. If the displayed value is not the closest 1,000 foot increment where you are located, follow the Altitude Tuning directions on page 13 and set accordingly.

Current Source: This area lists the ExtractCraft Source unit that is connected and being monitored. The four digits displayed coincide with the last four digits of the s/n of the unit found on the backside of the unit.

ALTITUDE TUNING

In order for your Source to perform at its full potential it's very important to program the elevation where it will be used to the closest 1,000 feet of elevation. Once you program an elevation it will remain as the default until it's manually changed to a different elevation.

DETERMINING ELEVATION

Option 1- Ask Siri "What's my current elevation?"

Option 2- Visit www.whatismyelevation.com and enter your current location.

STEPS TO PROGRAM ELEVATION

- 1) Plug in the Source and wait for the green lighted button to illuminate.
- 2) Push and hold the button for a full 10-seconds and release.
- 3) Observe the lighted button flash quickly 10-times.
- 4) Push the button once for every 1,000 feet of elevation up to 8,000 feet:

| Sea Level | no pushing (just wait for 10-seconds) |
|------------|---------------------------------------|
| 1,000-feet | 1-time |
| 2,000-feet | 2-times |
| 3,000-feet | 3-times |
| 4,000-feet | 4-times |
| 5,000-feet | 5-times |
| 6,000-feet | 6-times |
| 7,000-feet | 7-times |
| 8,000-feet | 8-times |

- 5) After entering your elevation the Source will pause for 10-seconds and the green lighted button will flash the same number of times it was pushed, once for every 1,000 feet.
- 6) If the Source repeats back the correct number of flashes you're finished and ready to start your extract crafting. If it's incorrect repeat steps 1-6 again. The elevation setting is stored permanently until the elevation is reprogrammed.

BOTANICAL RECIPES

ROSE EXTRACT

Ingredients: 100 grams dried rose petals, 12 oz. food-grade, grain alcohol of 190-proof (95%) alcohol

Tincture directions: Fill mason jar with rose petals. Fill alcohol to 1" above the level of the petals. Allow rose petal tincture to soak for 36 hours.

Strain tincture into Source reservoir cup. Follow typical extraction process.

LAVENDER EXTRACT

Ingredients: 20 grams of lavender, 12 oz. food-grade, grain alcohol of 190-proof (95%) alcohol

Tincture directions: Fill jar with cleaned lavender, hand break or crush the leaves, do not grind. Cover to 1/4" past the plant volume with alcohol. Allow tincture to soak for 30 minutes.

Strain tincture into Source reservoir cup. Follow typical extraction process.

PEACH HABANERO OIL MARGARITA ADDITIVE

Ingredients: 3 ripe peaches (pitted), 2 habanero peppers (remove stems), 7 oz. of freezer chilled food-grade, grain alcohol of 190-proof (95%) alcohol

Tincture directions: Blend all ingredients for 5 seconds in blender. Allow the mixture to soak 30 minutes.

Strain tincture into Source reservoir cup. Follow typical extraction process.

For this volume, the processing will take 240 minutes. Restart the Source after it automatically stops after 120 minutes. Check the consistency and taste, and continue to your desired result for the peach habanero extract.

Add full solution directly to a full bottle of tequila or add 1–5 drops per drink.

LAVENDER, CAYENNE, LEMON TOPICAL RUB

Ingredients: 28 grams lavender, 2 dried cayenne peppers, 1/4 cup dried lemon peel, 5-7 oz. chilled foodgrade, grain alcohol of 190-proof (95%) from freezer.

Tincture directions: Use an 8 oz. mason jar in which to combine all ingredients. Allow soak time of 30 minutes.

Strain tincture into Source reservoir cup. Follow typical extraction process. Processing should take 90 minutes. Stop the processing. Pour in bottle and allow the extract to settle before use.

Use oil directly on sore muscles or mix with coconut oil for topical cream.

Optionally you can prepare separate oils of lavender, cayenne (be careful!), and lemon. Warm up coconut oil to soft but not melted consistency, mix in lavender, cayenne, lemon oil and allow it to cool.

SOAK TIMES FOR TINCTURES

The following are some general times for soaking your tinctures that may help your results.

| 3–5 MINUTES Hops Thyme | Basil Oregano | Ground Coffee Ground Vanilla | Mint |
|--|--|--|--------|
| 30 MINUTES Cayenne Resins Aloe Vera Lavender | Jalapeno Lobelia Clove Eucalyptus | Habanero Citronella Rosemary Star Anise | •••••• |
| Propolis Dried Fruit | Avocado Marcuja | Nuts | •••••• |
| 24–96 HOURS Rose Petal Dried Beans | Oak Cedar | Dried Citrus Peel Whole Roots | Pine |

TROUBLESHOOTING

| Problem | Possible cause | Solution |
|--|---|--|
| Vacuum pump runs continually | Outer collector is not sealing. | Check the lower seal and collector are securely in place and clear of any debris. Try pressing down on the lid gently while the vacuum pump is running. Confirm the pressure relief screw is turned fully to the right and has not been crossthreaded. Use the mobile app to view the vacuum level. When the pump is running, the vacuum level should be steadily rising and will turn off when it reaches 100%. If the problem persists inspect the glass cylinder composing the collector for chips and damage. If the glass is obstructed or damaged a vacuum seal is not possible. |
| Comm icon in mobile app is red | Bluetooth not on/ Source not pairing | Check your mobile device settings and make sure you have Bluetooth ON. Plug in the Source and make sure the green light on the base is ON before launching the Source app. |
| The Source process turned off but the | Automatic shut down due to time allowance | The Source process runs for a maximum of 120 minutes, then automatically shuts off. To run a longer extraction, simply restart it by pressing the green button or by using START PROCESS from the mobile app. |
| extraction is not finished | Power outage or circut breaker | To restart, unplug the Source and allow it to cool. Once it is cool, plug it back in and restart the process. |
| Green light does not illuminate | The power cord is not plugged in/outlet not getting power | Check that the power cord is firmly plugged into the outlet. Check your breaker or switches that control your outlet. Test another appliance in that outlet to verify it is working. |
| Green light continuous flashing | Safety shutoff | Contact customer service at info@extractcraft.com or call (720) 307-8628 |
| Cannot tell if the process is running | Green button is lit, but the Source is quiet. | Once the Source has been started, if you are unsure whether the process is stopped or running, you can check two ways: observing the green illuminated button which will blink once every 10-15 seconds when in operation; or by using the app to view the status. |

TECHNICAL SPECIFICATIONS

Performance: Processes 1/2- 2 oz of

dry material

Power: 110-120 VAC 60 Hz, 1.2 A, 125W

Connectivity: Bluetooth BLE

Dimensions: The Source stands 10-inches tall. The base is 7-inches long by 7-inches wide.

Safety Feature: 120 minute maximum run time per

start

WARRANTY

Extractcraft shall repair or replace the Source, in its sole discretion, for any manufacturing defect for a period of 12 months from shipment of the device when purchased from ExtractCraft or an authorized dealer defined in the "AUTHORIZED SELLER" section below.

We strongly urge caution when purchasing from Amazon and Ebay. Amazon and Ebay online purchases from sellers not included in the "AUTHORIZED SELLERS" list below will not be covered by the ExtractCraft warranty and will not be eligible to be serviced by ExtractCraft. ExtractCraft reserves the right to update and amend the Authorized Sellers list without notice. The ExtractCraft warranty does not cover purchases outside of our authorized dealers and units will not be eligible for servicing by ExtractCraft.

AUTHORIZED SELLERS: All brick and mortar store sellers. All independent website online sellers. ExtractCraft on Amazon. Focus Camera on Amazon. ALL other Amazon and Ebay sellers are UNAUTHORIZED and will not be covered by warranty or serviced by ExtractCraft.

GLOSSARY

absolutes aromatic concentrated oily mixtures

extracted from plants requiring the use

of solvent extraction techniques

flash point temperature at which a compound gives

off sufficient vapor to ignite in air

concrete a more concentrated form than

absolutes, resulting in a wax-like

substance

tincture a solution of plant matter in alcohol

