

## F0522 - 500lb Flake Ice Machine

Prodigy Plus® Flake Ice Machine

## Superior performance with every cup.

Now the soft, chewable flake ice that customers love is available with more innovative technology than ever before. With next-generation diagnostics like AutoAlert™ indicator lights on the new Scotsman Prodigy Plus® flake ice machines, operators can help ensure superior performance while enjoying maximum efficiency — every day. And with features like advanced ice level control, a small operational footprint and easy-access service from the front panel, Prodigy Plus® flake ice machines are the smart choice for today's busy food-service environments.



#### The Prodigy Plus® difference.

- AutoAlert™ indicator lights for better visibility
- Operational footprint among the industry's smallest
- Industry-exclusive QR code instantly connects users to service information and warranty history
- Front-located air filter for more efficient operation
- Self-aligning front panel for easy access to key components
- Patented WaterSense purge control automatically reduces scale buildup
- Smart-Board™ advanced feature module available for additional diagnostic
- Optional Vari-Smart<sup>™</sup> ice level control allows operators to customize ice levels
- Antimicrobial protection guards internal surfaces between cleanings
- A full range of water- and energy-saving features



### 24 Hour Volume Production

Ai	r Cooled	Water (	Cooled
70°F/21°C	Air 90°F/32°C	70°F/21°C A	. 501/52 0
50°F/10°C	Water 70°F/21°C	50°F/10°C Wa	
450/205	320/145	530/240	420/191
lb/kg	lb/kg	lb/kg	lb/kg





B842S

# **Modular Bin Options**

Model Number*	Dimensions W" x D" x H"	AHRI Certified Bin Capacity lb/kg	Application Capacity lb/kg	Finish	Ship Weight Ib/kg
B322S	22 x 34 x 44**	370/168	290/132	Metallic	140/64
B330P	30 x 34 x 31**	344/156	270/123	Poly	90/41
B530P	30 x 34 x 44**	536/244	420/191	Poly	110/50
B530S B842S	30 x 34 x 44** 42 x 34 x 44**	536/244 778/353	420/191 610/277	Metallic Metallic	150/68 185/84

<sup>\*</sup> Contact Scotsman for bin top requirements. \*\* Add 6" Height for bin legs.





Cools more quickly than other ice forms. Ideal for seafood and produce








- 3 years parts and labor on all components.
- 5 years parts on the compressor

Warranty valid in North, South & Central America. Contact factory for warranty in other regions.



- 775 Corporate Woods Parkway, Vernon Hills, IL 60061 •
- 1-800-SCOTSMAN Fax: 847-913-9844 www.scotsman-ice.com customer.relations@scotsman-ice.com •

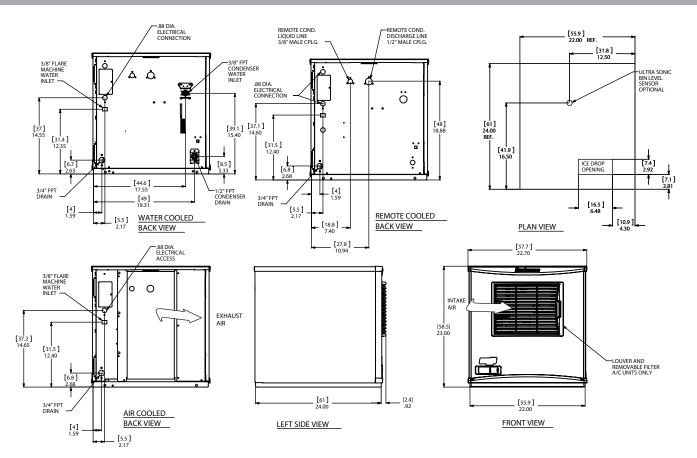



## **Specifications**

Water Usage  Max. Fuse Size  Energy Consumption Gallons/100 lb (liters/45.4 kg)					)				
Ice Head Model Number	Condenser Unit	Basic Electrical Volts/Hz/Phase	or HACR Circuit Breaker (amps)	Circuit Wires	Min. Circuit Ampacity	kWh/100 lb (45.4 kg) 90°F(32°C)/70°F(21°C)	Potable 90°F(32°C	Condenser C)/70°F(21°C)	Energy Star®
F0522A-1	Air	115/60/1	20	2	15.2	6.1	12.0/45.5	-	
F0522W-1	Water	115/60/1	20	2	14.4	3.9	12.0/45.5	82/310.73	



## **All Models**

#### Dimensions (W x D x H):

Unit: 22.9" x 24" x 23" (58.2 x 61.0 x 58.4 cm)

Shipping Carton: 25.5" x 27.5" x 28.5"

(64.8 x 69.9 x 72.4 cm)

Shipping Weight: 173lb / 78kg BTUs per hour: 5,000

Refrigerant: R-404A



Model Number	Description	
KVS KSBU KSBU-N KPAS	Vari-Smart <sup>™</sup> Ice Level Control - Program ice bin levels to match ice needs. Smart-Board <sup>™</sup> Advanced Control - Use additional operational data for fast diagnosis. Smart-Board <sup>™</sup> Advanced Control with Network - Network capable. Prodigy Advanced Sustainability kit- includes KVS and KSBU-N	

Scotsman recommends all ice machines have water filtration. See Scotsman water filter specification sheet for details.



	Minimum	Maximum
Air Temperatures	50°F (10°C)	100°F (38°C)
Water Temperatures	40°F (4.4°C)	100°F (38°C)
Remote Cond. Temps	-20°F (-29°C)	120°F (49°C)
Water Pressures	20 PSIG (1.4 bar)	80 PSIG (5.5 bar)
Electrical Voltage	-10%	+10%

Specifications and design are subject to change without notice.

