

KIMTECH™ N95 RESPIRATOR

KIMTECH™ N95 Respirator is a single-use respirator to be used by skilled professionals in critical environments who need to protect the process and are mandated to wear specific PPE to protect against the transfer of non-oil aerosolized particulate matter.

Not tested against COVID-19 and therefore not recommended for efficacy or use. Not for medical use.

Product Description

| Code | Description | Color | Quantity |
|-------|-----------------------|-------|--------------------------------|
| 53358 | Respirator with pouch | White | 50/bag, 6 bags/case, 300 total |

| | ıcti | |
|--|------|--|
| | | |
| | | |


| Component | Material |
|--------------|--------------------------------------|
| Inner facing | Non-irritating polypropylene |
| Outer facing | Non-irritating polypropylene |
| Filter Media | Electro-statically treated meltblown |
| Headband | Elastomeric polypropylene material |
| Nosepiece | Flexible wire |

Physical Properties

| Property | Target | Test Method |
|-----------------------|------------------------|------------------|
| NaCl Penetration | <5% @ 85 lpm | TEB-APR-STP-0059 |
| Exhalation Resistance | <25mm H ₂ O | TEB-APR-STP-0003 |
| Inhalation Resistance | <35mm H₂O | TEB-APR-STP-0007 |

Features

- NIOSH certified: TC# 84A-9042
- Comfortable non-irritating lining
- Flat pouch-style breathing chamber for added comfort
- · Headbands of bicomponent elastomer material
- Fits secure to face, helps ensure tight facial seal, and prevents leakage around edges
- Two layers of electro-statically treated meltblown filter media
- Provides a minimum of 95% filtration efficiency for 0.3 micron particles
- Not oil resistant

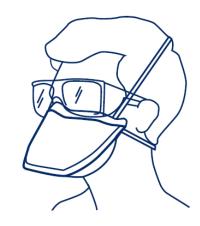



For Additional information: Contact your Kimberly-Clark representative or our North America Customer Service Team at (888)-346-GOKC (4652) or KCPInfo@kcc.com.

Certificate of Conformance available online at www.kimtech.com/certificates.

K-C Confidential: The information contained in this document is intended for the use of the addressee(s) only and may contain privileged, confidential, or proprietary information that should not be distributed publicly without Kimberly-Clark's written consent.