

CLOTH HEATERS & INSULATORS

WinterShield™ Freeze Protection Heated Pockets

(WSP Series)

- ▶ Creates a pocket of warmth to protect devices against extreme cold
- ▶ For use in all weather, sub-freezing environments
- ▶ Universal sizes for a wide range of objects
- ▶ Plug-and-play with extra-long 16 ft (5 m) power cord
- ▶ Removable and reusable
- ▶ One-piece rugged but lightweight design
- ▶ Lace-up openings on two-sides for easier installations


Benefits

- Versatile — installs around a wide range of objects
 - Standard size fits any object with overall dimensions up to 6 x 6 x 7 in (152 x 152 x 186 mm)
 - Large size fits any object with overall dimensions up to 14 x 20 x 26 in (356 x 508 x 660 mm)
- Easy-to-install and remove — save on labor costs
- Decreased downtime and maintenance costs
- Safe and cool to the touch
- Long service life: BriskHeat's typical heating jacket life is 10+ years

**PLUG
and
PLAY**



**Water
Resistant**

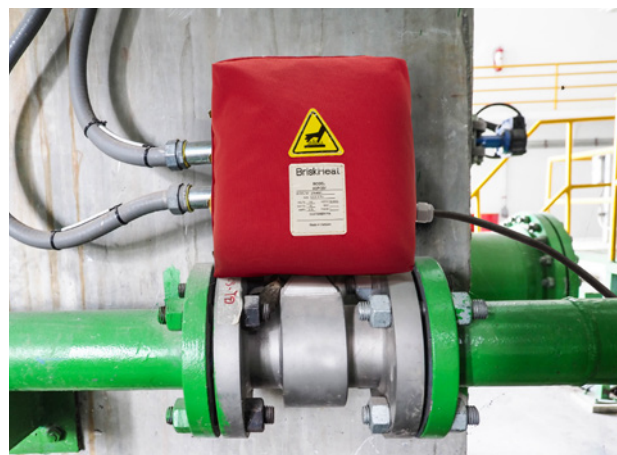

IDEAL FOR

PRESSURE TRANSMITTERS • PUMPS • GAUGES • MANIFOLDS • & MORE



CLOTH HEATERS & INSULATORS

WinterShield™ Freeze Protection Heated Pockets

(WSP Series)


Specifications:**Voltage:** 120 to 240 VAC**Control:** Built-in thermostat pre-set at 45°F (7°C).
Other temperature settings available upon request**Outside Material:** Extra-durable polyester cloth**Insulation Material:** Mold/mildew resistant melamine**Insulation Thickness:** 0.5 in (130 mm)**Power Cord:** 16 ft (5 m) long with

120 VAC: Grounded 3-prong plug (NEMA 5-15P)

240 VAC: Crimped ferrule leads

Ingress Protection Rating: IP54**Ordering Information:**

Size	Dimensions in (mm)	Watts	Part No. 120 VAC	Part No. 240 VAC
Standard	6 x 6 x 7 (152 x 152 x 178)	94	WSP120V	WSP240V
Large	14 x 20 x 26 (356 x 508 x 660)	200	WSP120LGV	WSP240LGV

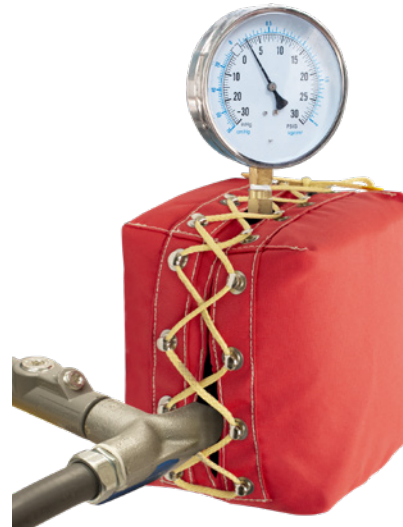

Lace-up openings on two sides makes it **easy to install** and maneuver around obstructions like pipes, electrical wiring, conduits, and bases/stands

Standard size fits most **Foxboro, Rosemount, Emerson, and other industrial pressure transmitters**

Large size fits most **Ingersall Rand, Viking, Goulds, and other industrial pumps**

Custom Sizes and Designs Available: Contact your local distributor or BriskHeat® for more information.