



TekniMop Product Description

Teknimop is an excellent choice for cleaning of floors & walls in controlled environments & medical facilities.

Best performance is provided by combining the "pick-up" of microfiber, with hi liquid holding capacity.

Lightweight, ergonomic and easy to use on all surfaces; Compatible with most solvents & cleaning solutions
Microfiber provides maximum surface area, removes 99.9% contaminants in 1 pass, and will not support bacteria.

No water is used in the production of this product, 100% auto-processing, 100% recyclable

100% synthetic "non quat-binding" materials assure consistent application of disinfectant or cleaning fluid.


Direct "hook & loop" attachment. Best performance at economical costs

Composition & Attributes

- * Very Low Particle & Fiber Levels, Very Hi Sorbency per Weight
- * 100% Synthetic & Recyclable Eco friendly material
- * Microfiber Polypropylene Surface / Polyester Support
- * Maximum Surface Area for best Exposure & Pick-Up
- * Saturated mop will effectively cover >200sq' area
- * Mophead & hardware are Autoclavable

Applications

- * Surface cleaning (smooth or textured) floors & walls
- * Hi liquid holding capacity facilitates surface exposure & easy use
- * Excellent surface area for best contact and removal of contaminants
- * Non Quat Binding materials, No depletion of disinfectant or cleaner
- * Compatible with ISO Class 6-7 (Class 1000-10,000) environments
- * Available Sterile for Aseptic Environments; Cobalt 60 Gamma Irradiation
- * Available pre-saturated with 9% IPA / 91% DIW for ready use then disposal
- * 316SS hardware available for long term autoclavability

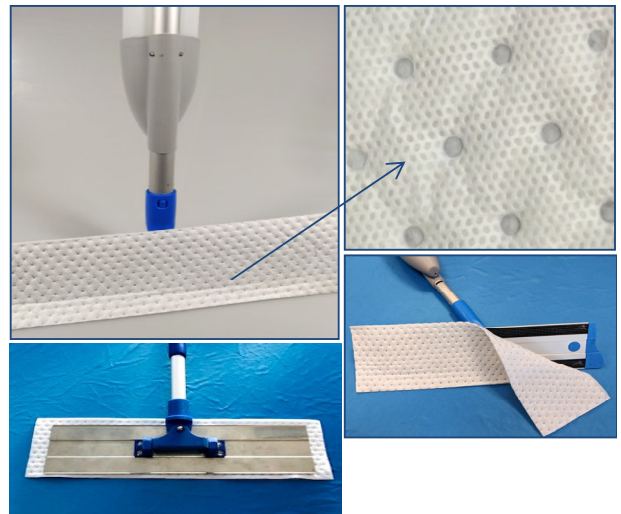

Physical Properties

- * Material 280 Grams per unit
40 GSM Polypropylene Microfiber Cleaning Surface
200 GSM Hydro-entangled Polyester Absorbent Layer
40 GSM Spun-bond Polyester Backing Layer
- * Absorbency Extrinsic Capacity: >170 ml/pc
Intrinsic Capacity: >0.65 ml/g
Sorptive Rate: <1 second

Ordering Information

Product

Product #	Description
TM-516V	Teknimop, Polypropylene, 5" x 16"
TM-516VS	Sterile Teknimop, Polypropylene, 5" x 16"
TM-516VI09	Pre-Saturated Teknimop, 9% IPA/91% WFI, Polypropylene,
TM-516V-SS	Teknimop 316SS Hardware; Velcro Frame & Handle
TM-516V-1	Teknimop Hardware; Velcro Frame & Handle
TM-516V-2	Teknimop Dispensing Hardware; Frame, Handle/Reservoir

Packaging

10 Bag, 20 Bags/Case
10 Bag, 20 Bags/Case
2/Pack, 50 Packs/Case
1 Each / Case
12 Each / Case
12 Each / Case