


ACCESSORIES

Buttress Adapters

You may have containers which have a coarse thread - such as you see here. The drum seals are not pliable enough to work with these large threads. There are buttress adapters for these special openings: 2.25" for most Asian manufactured drums, 2.5" for most U.S. drums, and 2.75" for most European drums. These adapters are sold with a large o-ring to assist with the seal on the container.



2.5" Adapter

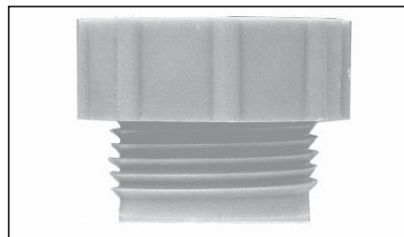

2.25" Adapter


Rieke® Flex Spout® Adapter

This adapter allows the pumps to be used on containers which feature a Rieke® FlexSpout®. This eliminates tipping of the container and associated spill hazards. Supplied with Nitrile washer as standard, EPDM and Viton® washers are also available.



Spout Reducer

This adapter allows easy filling of containers with small necks.

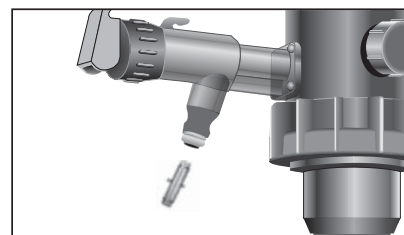

Sprayer Wand

Sprayer wands are ideal for applying biocides, rust inhibitors, deodorizers or degreasing agents in manufacturing plants, and for the application of fertilizers, hormones and pesticides to plants in greenhouses, fruit groves and fields. Use with the shop air adapter if applying more than 5 feet away from the drum. Supplied with viton o-rings as standard, nitrile and EPDM orings are available from your dealer.




Remote Discharge Tap

Remote Discharge Taps are available for point of use delivery of liquids. All standard hoses are PVC. We offer specialty hose selections for fluids not compatible with PVC including FEP lined tubing, Tygon 2075 and Tygon 4040.




O-ring Repair Kit

Just the essential O-ring and other necessary elastomeric parts are available for all user-accessible parts in Nitrile, EPDM, Santoprene and Viton.

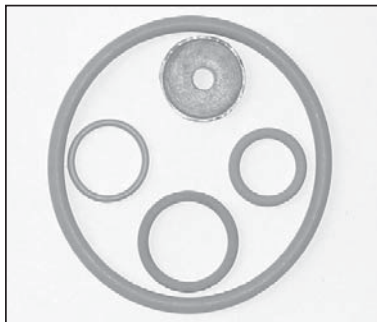

Single Siphon Tube

This seamless 38-inch tube is recommended for oily or very viscous fluids. Standard tubing can allow viscous fluids to leak, or admit air at joined sections. The seamless tube assures a smooth, uncontaminated flow.

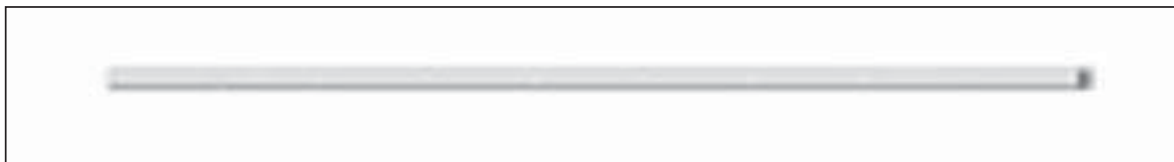

GT Filter Pak

This kit allows for screening of fluids with an 80 x 80 stainless 304 mesh. Kits are available in Nitrile, EPDM and Viton.




12 Inch Standoff

The 12-inch standoff allows the receiving container to be placed on top of the drum for easier transfer.



Shop Air/Compressor Adapter

Featuring a pressure regulator and an external pressure safety valve, the compressor setup connects to a standard ½" quick disconnect hose and delivers fluids at up to 4.5 gallons per minute with a working pressure of only 2 - 4 PSI.

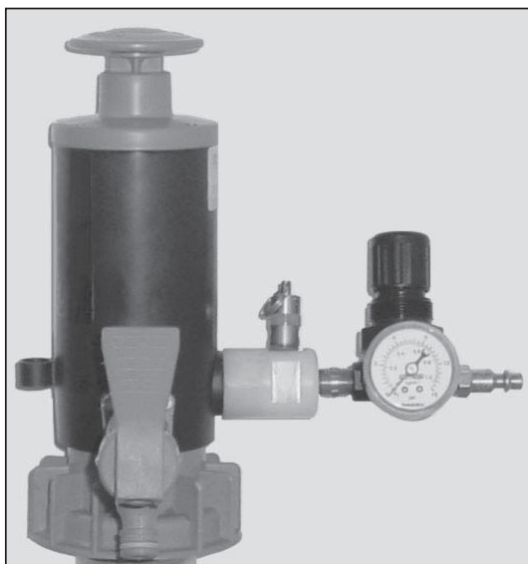


GT Multi-Pump System

Designed to expand capability and streamline operations where multiple process chemicals are dispensed, the GT Multi-Pump Dispensing System allows simultaneous multiple liquid transfer stations to operate from a single compressor line with only 2 - 6 psi. The basic system can handle up to four pumps simultaneously, and additional system components can be added to meet any requirement.

GT Anti-Tamper Kit

The GT Anti-Tamper Kit prevents unintentional over-pressurization of containers when using the Shop Air Adapter or GT Multi-Pump System.

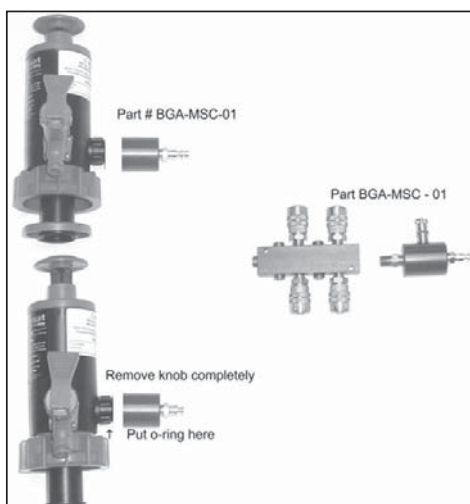

GTMulti-Pump System



GT Anti-Tamper Kit